 


SPECIFICATIONS	
MODEL	MAC 60R
AIR FLOW	1.4 CFM
NORMAL PRESSURE	1.7 PSI
POWER	120V/1.3A/60Hz
OUTLET CONNECTION	3/4 INCH
WEIGHT	10 LBS
POWER CONSUMPTION	45 W
POWER CABLE	6 FEET

- Installation / Operation & Maintenance Notes:**
- Install blower on concrete base. Ensure adequate ventilation and protect against sunlight.
 - Maintenance requires a trained technician.
 - For maximum efficiency, inspect and clean internal air filter once every 3 months
 - Replace diaphragm / valve assembly once every 12 months (Note: A damaged diaphragm will trigger the Automatic-Stop function).



BLOWER
MAC 40R