


Pump-out Instructions

As part of routine maintenance, FujiClean treatment system units will periodically require "pump-out", removing accumulated sludge & scum. Frequency of pump-out varies widely based on individual system use. It is important that you, the pump-out provider, be familiar with our proper pump-out technique. Questions? Call FujiClean USA: (207) 406 - 2927


1 Know Your Tank!

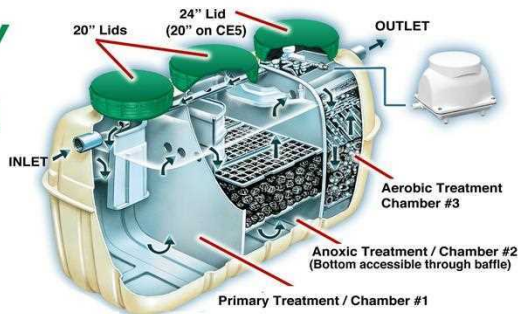

2 Know When To Pump

When according to the system's O&M provider:

1. Sludge and/or scum reach designated limit levels
2. Low quality effluent

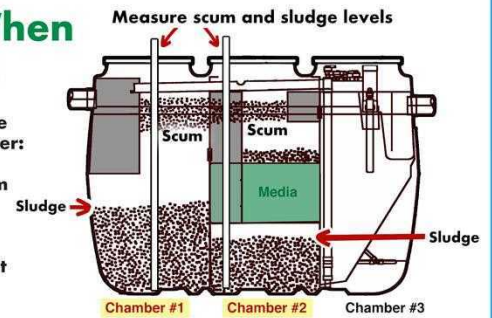

3 Keep Truck Away From Tank




4 Turn Off Power!

Use main power breaker inside alarm panel


FIRST, gently skim scum off top in Chamber #3

Use lead hose (3" or smaller)

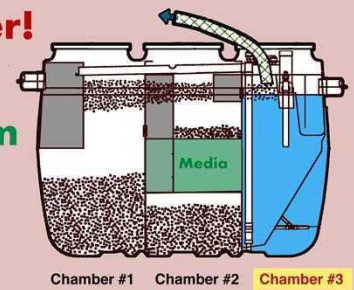

5 THEN Pump Scum From Chamber #2


Be careful not to damage PLATFORM holding media in place!

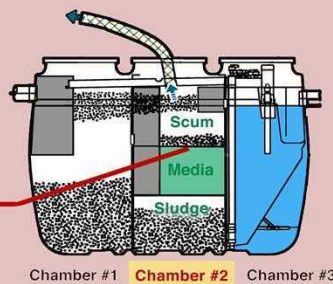

Do not scrape tank walls with hoe or scraper!


6 THEN Pump Sludge From Chamber #2

Access bottom through baffle in Chamber #2

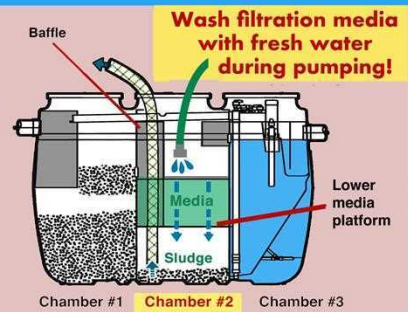


Do not probe tank inside with metal objects!

7 THEN Pump Scum From Chamber #1

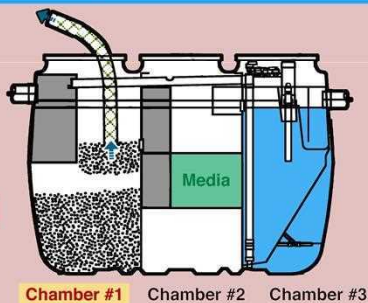

Do not use crust buster or mechanical means!


8 THEN Pump Sludge From Chamber #1

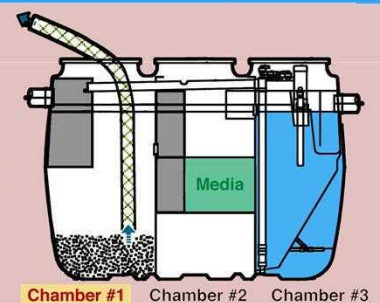

Do not backwash tank with contents that have been removed!

9 Refill Chambers #1 and #2 To Low Water Mark

Use water level decal inside chambers

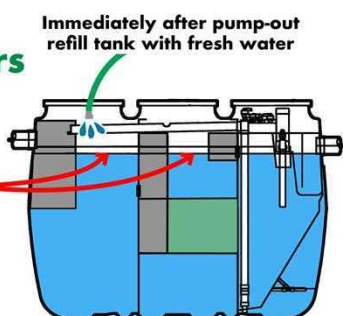

10 Turn Power Back On!

Check that air is moving water inside the tank

Replace Covers & Secure With Safety Screws

